

# CAS Product Quick Guide

## CL-5200

CAS CL-5200- Label Printing Scale

### Labelling Operation

#### Weight items

1. Press speed key to call up a PLU  
OR  
press PLU number + **PLU** key
2. Place item on the Platter.
3. Press **Print** Key to print a label.

#### Count items

1. Press speed key to call up a PLU  
OR  
press PLU number + **PLU** key
2. Enter the number of pieces
3. Press **Print** Key to print a label.

